 
 
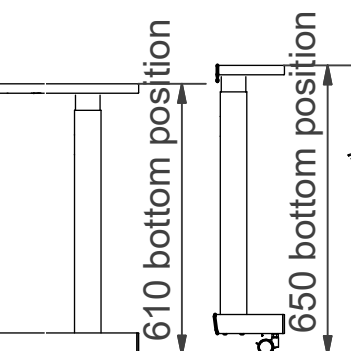 


Assembly & use instructions

 
 
BeActive OneLEG Office electric table

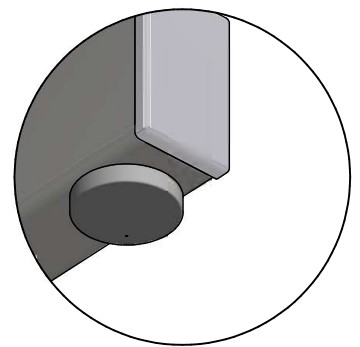

GLIDES

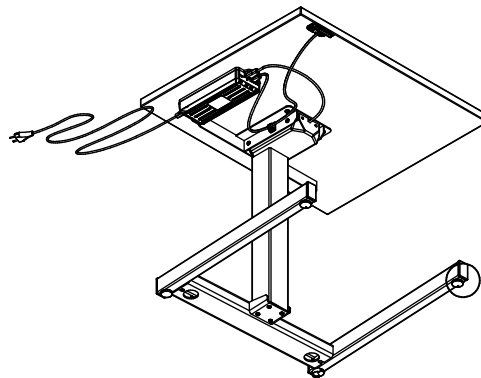

CASTORS

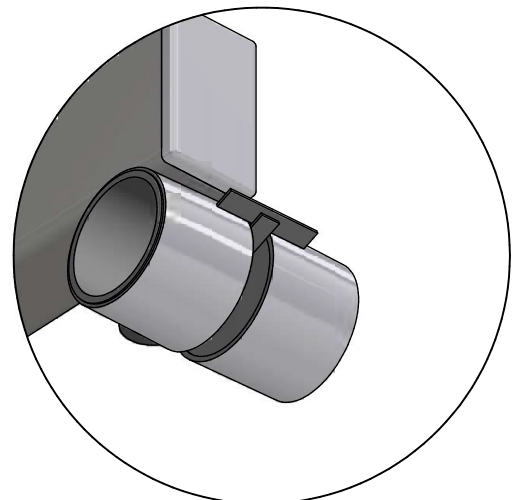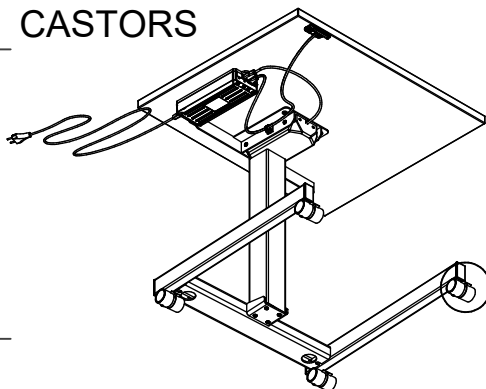

PARTS AND ACCESSORIES:

TOOLS NEEDED:

Allen wrench 4mm




Tape measure (not included)


Phillips screwdriver (not included)

Fixed key 13mm (not included)

The desktop is not included in delivery!

- | | |
|------------------------|-------|
| (1) Leg | 1 pc |
| (2) Foot part | 1 pc |
| (3) Upper frame | 1 pc |
| (7) Control box | 1 pc |
| (8) Handset | 1 pc |
| (9) Power cord | 1 pc |
| (10) Cable clip | 1 pc |
| (11) Resonance blocker | 5 pcs |

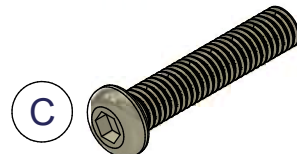   - | | | |
|--|---|-------------------------|
|  | A | 9x wood screw K5x16 |
|  | B | 6x machine screw KM6x10 |
|  | C | 4x machine screw KM6x30 |

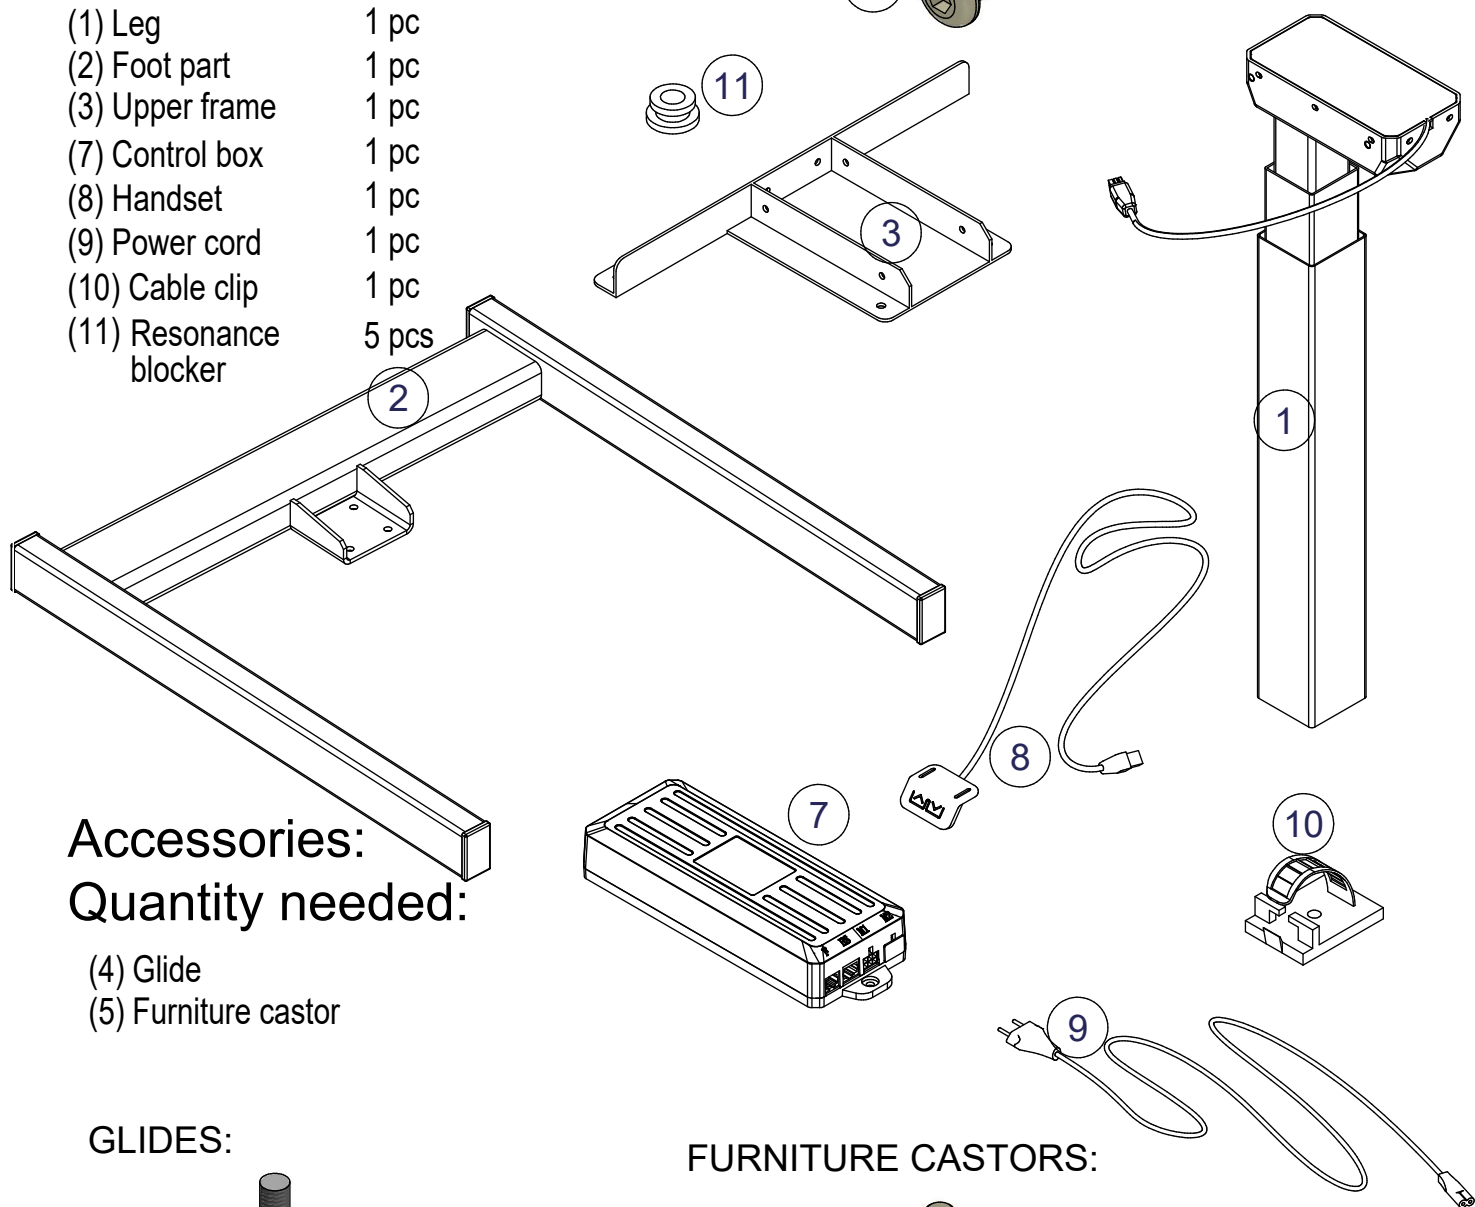 


Accessories:


Quantity needed:







- | | |
|----------------------|---|
| (4) Glide | 4 |
| (5) Furniture castor | 4 |



 
GLIDES:

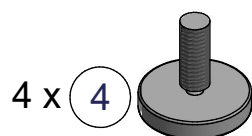




FURNITURE CASTORS:

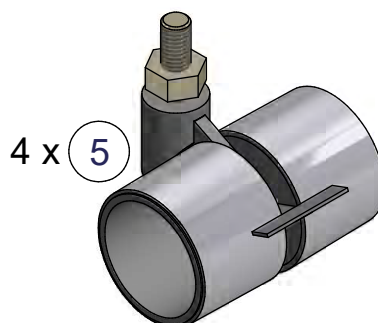 


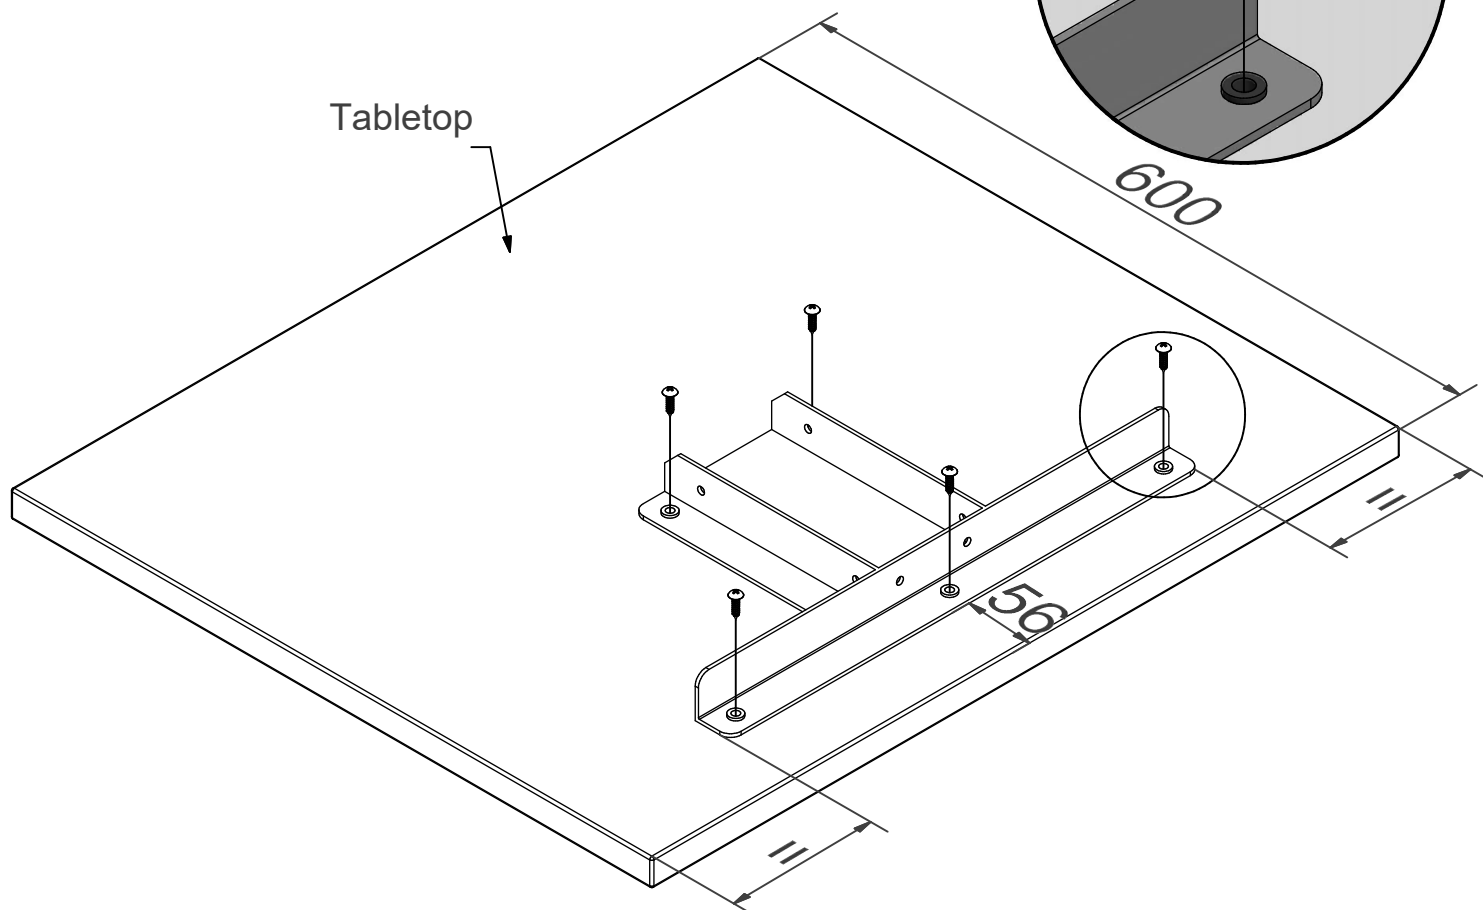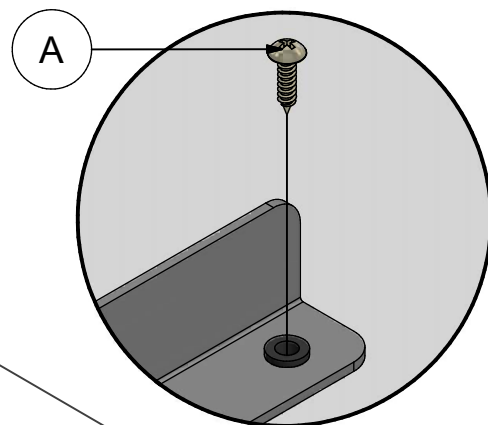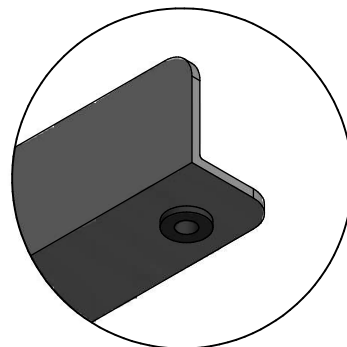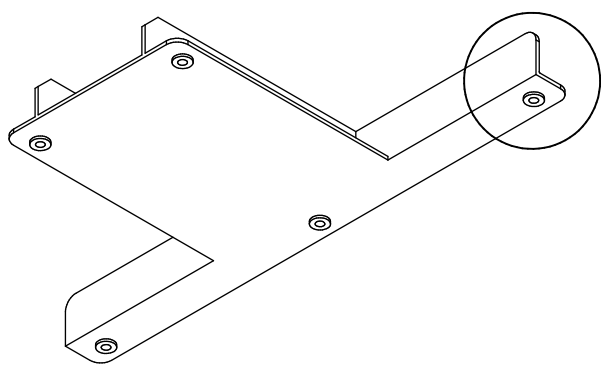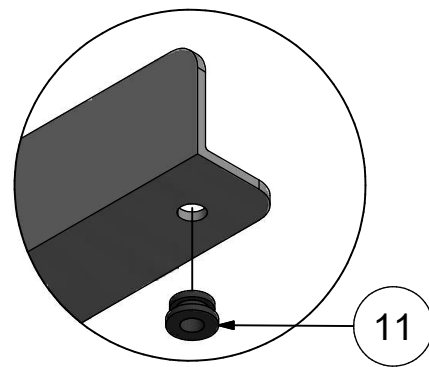     
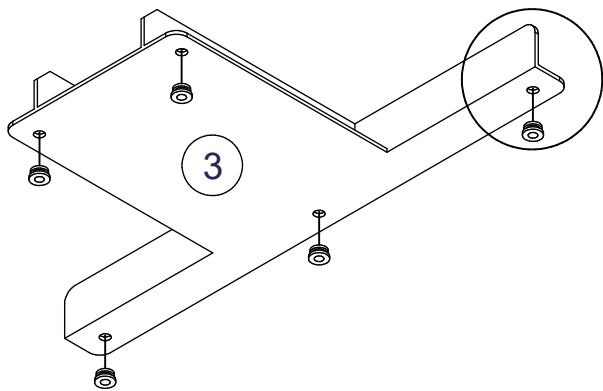 


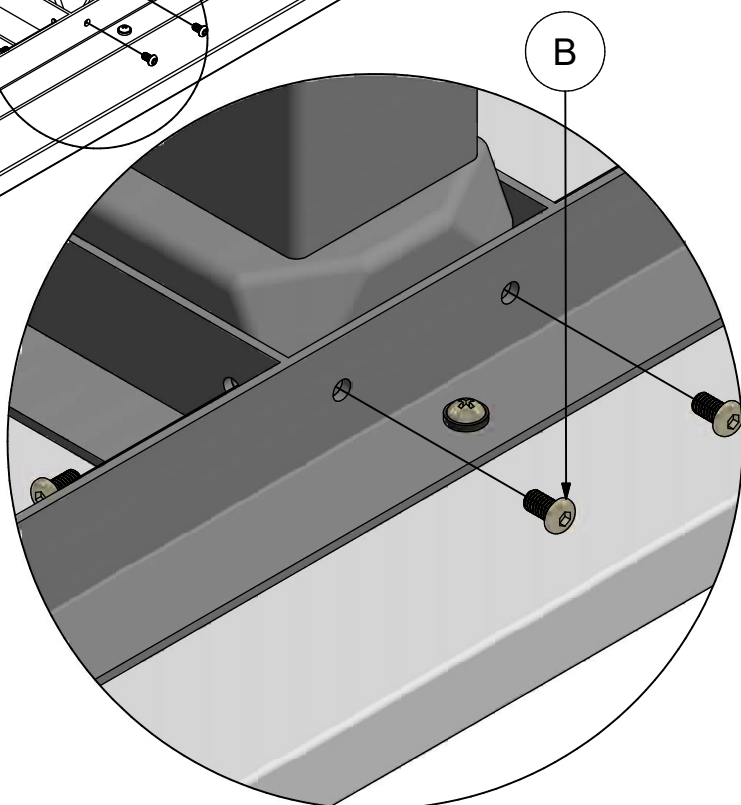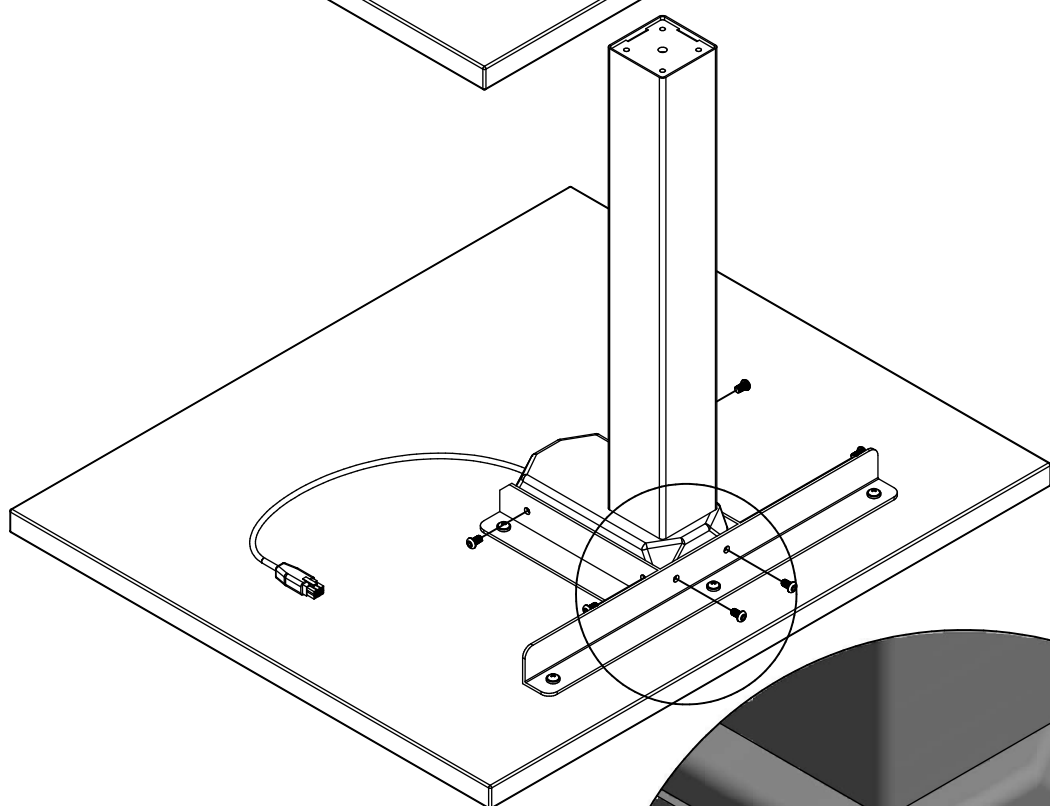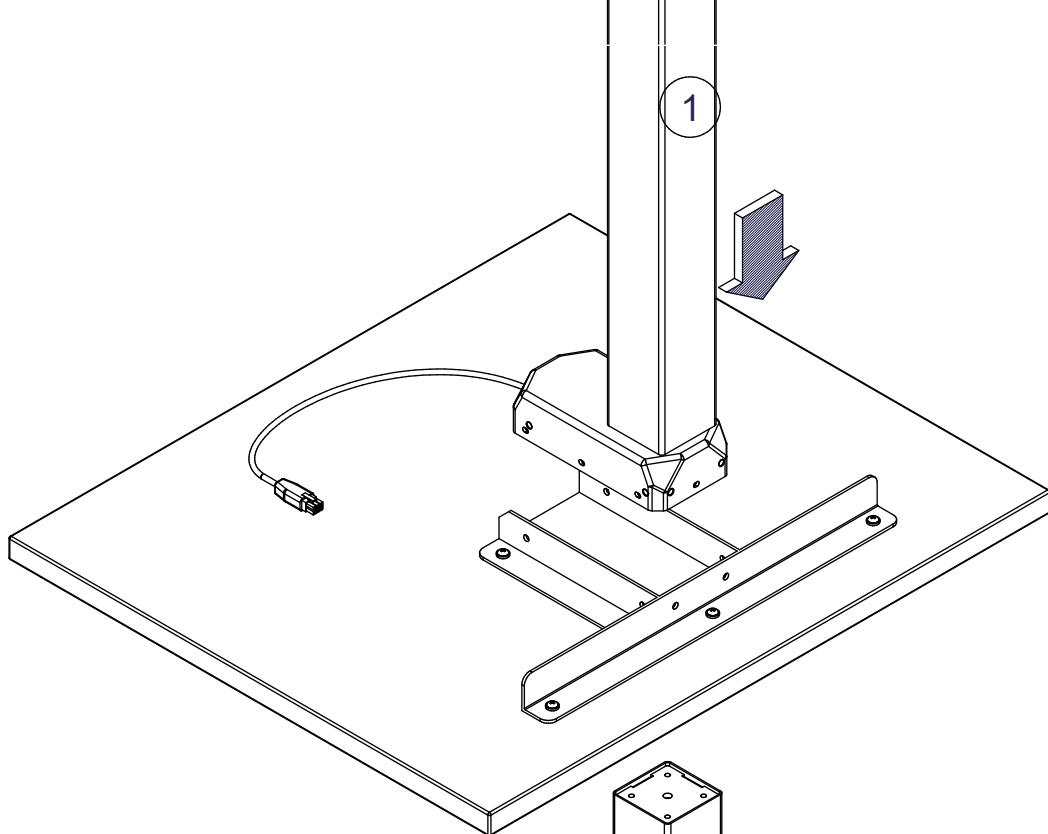   



Optional side
for control box

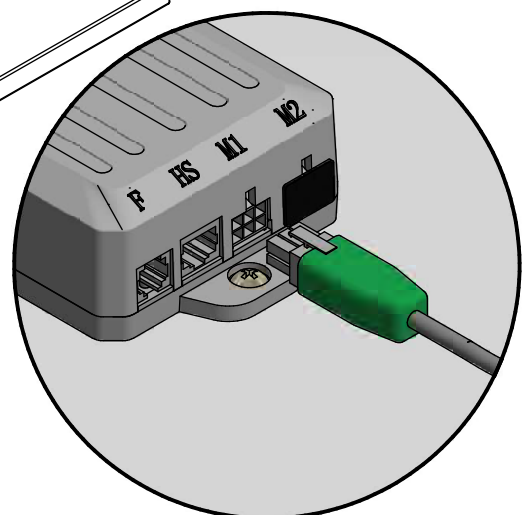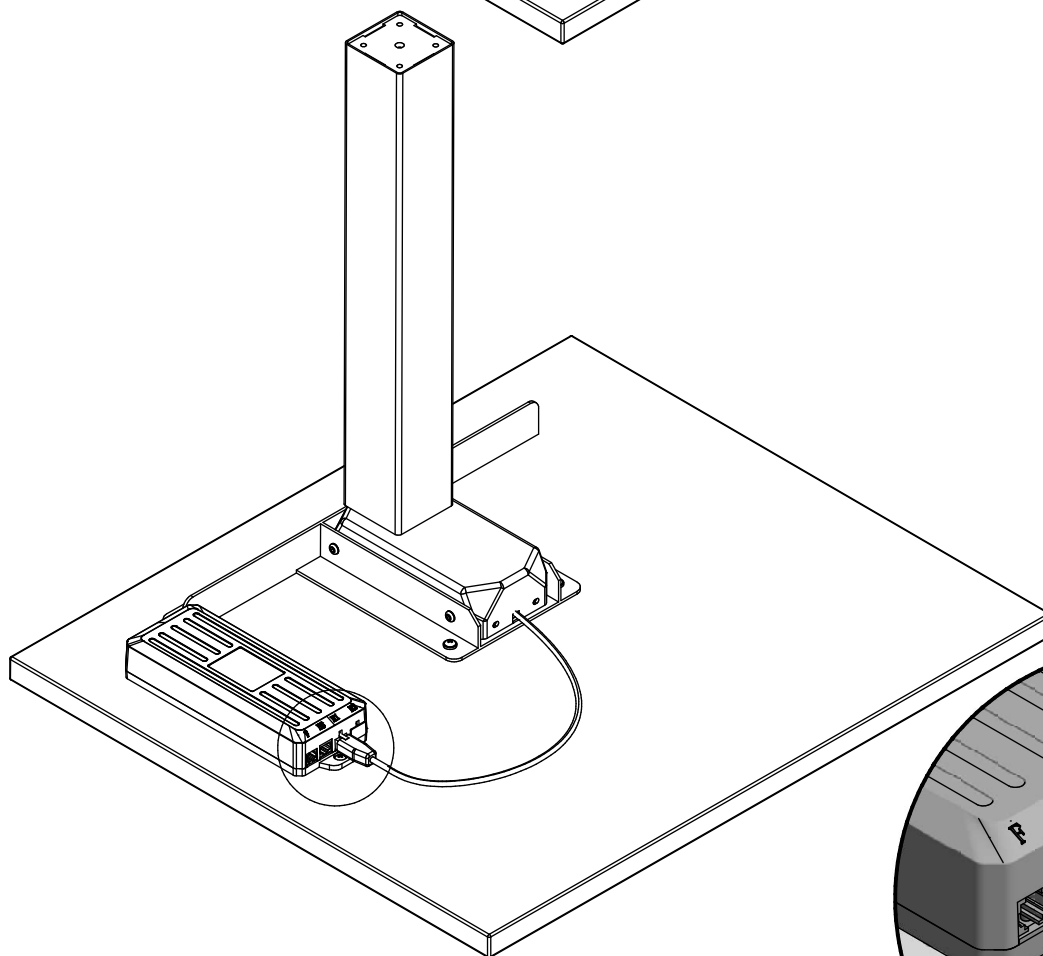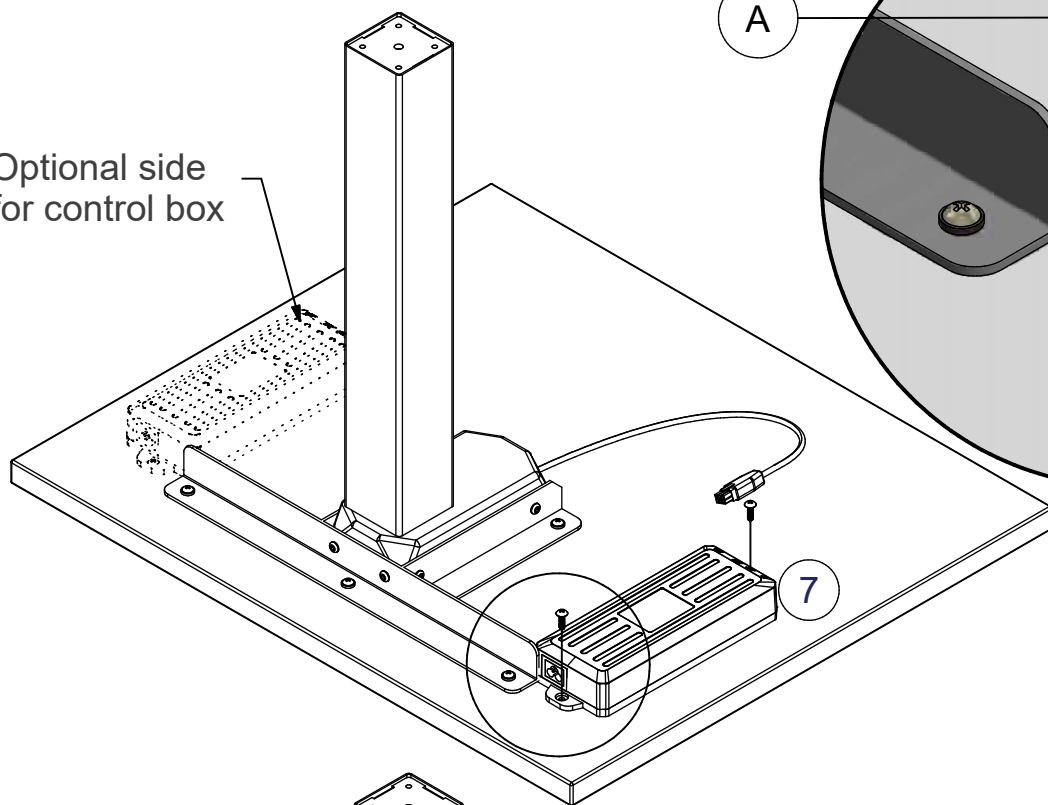   

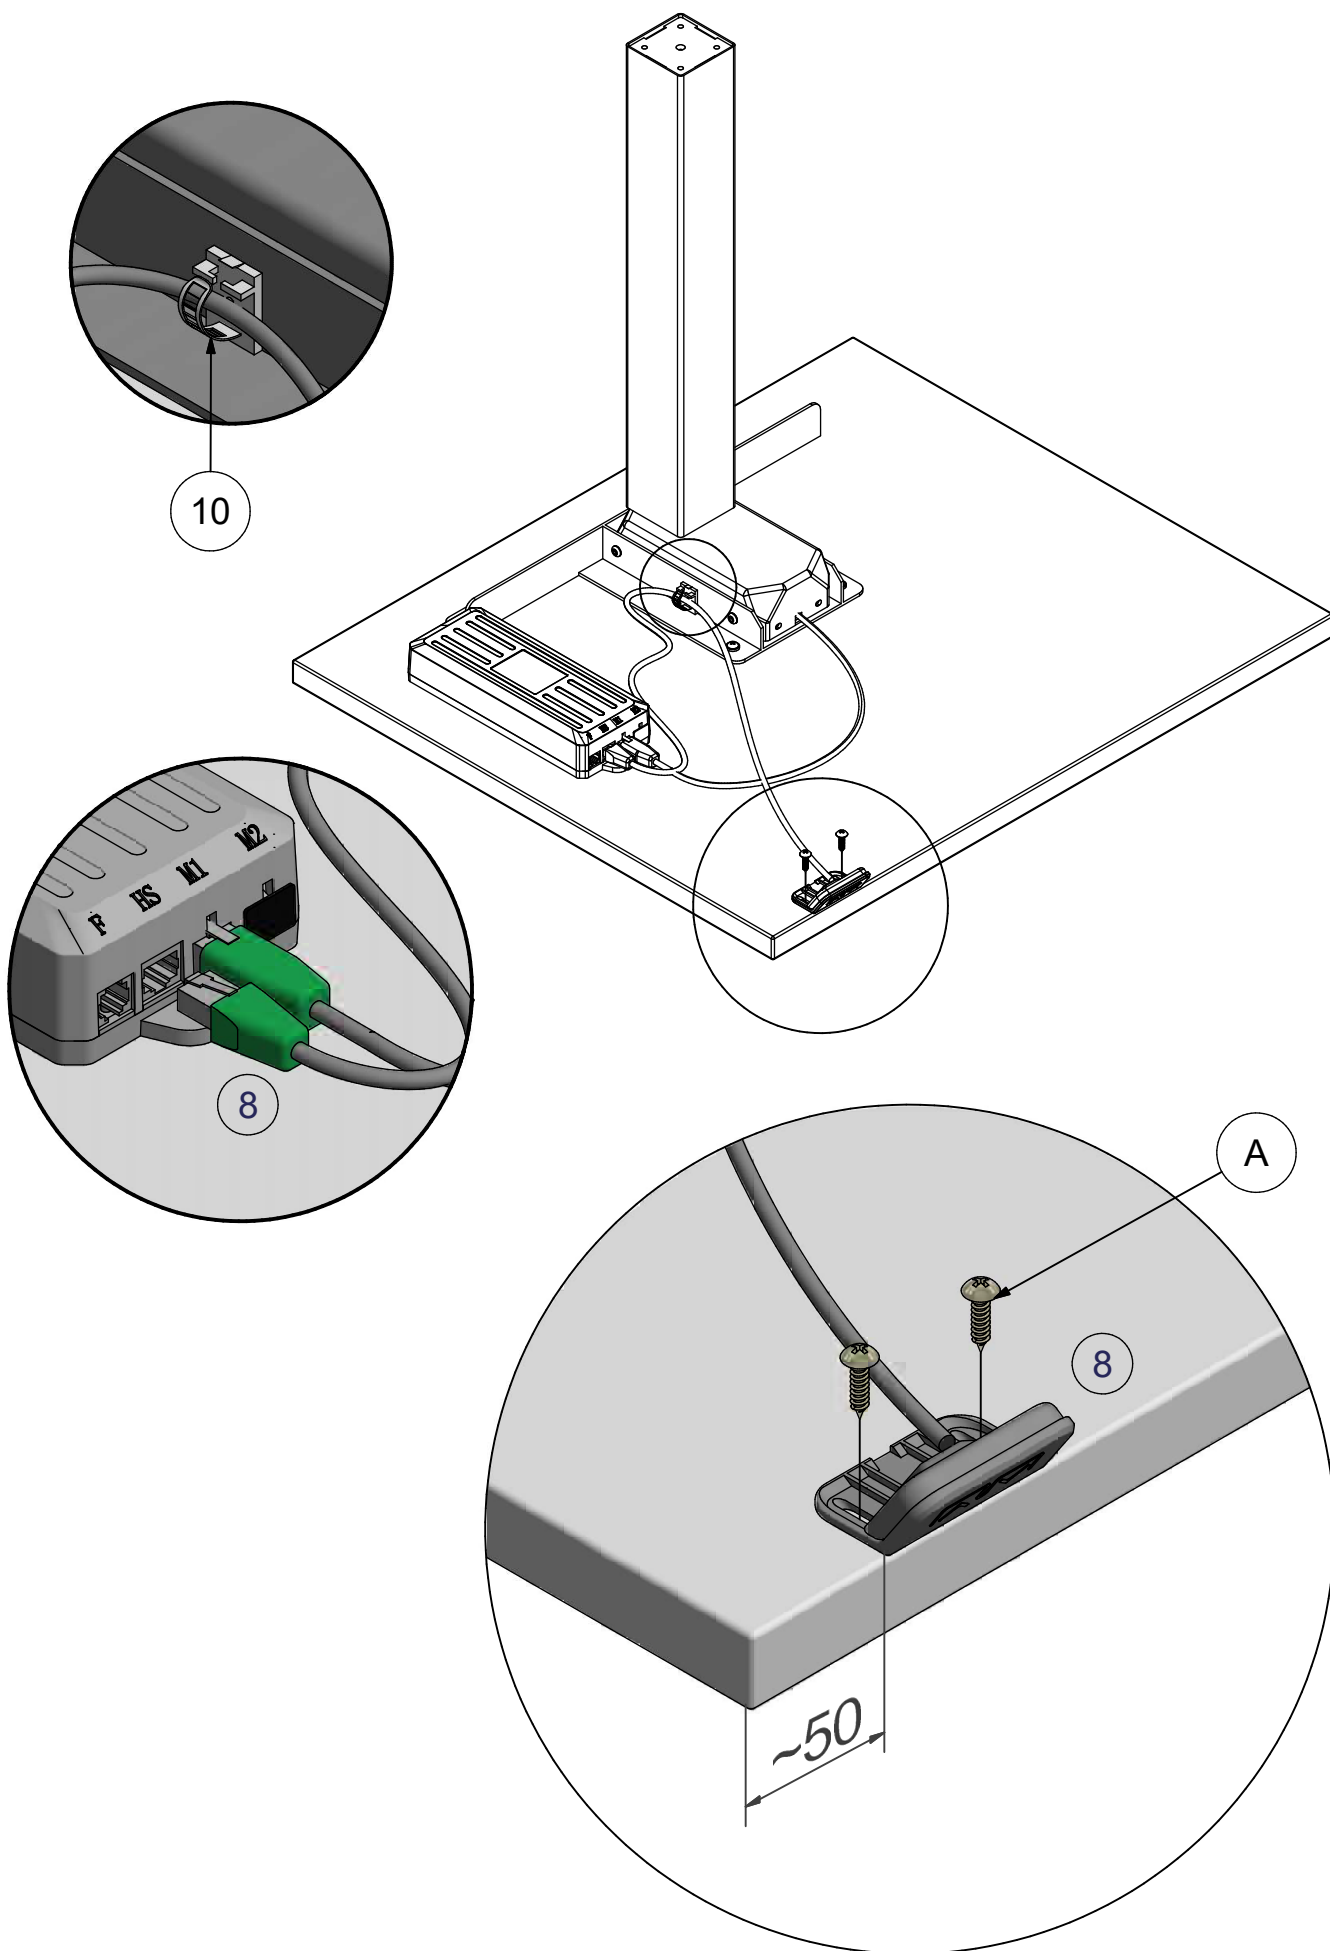 


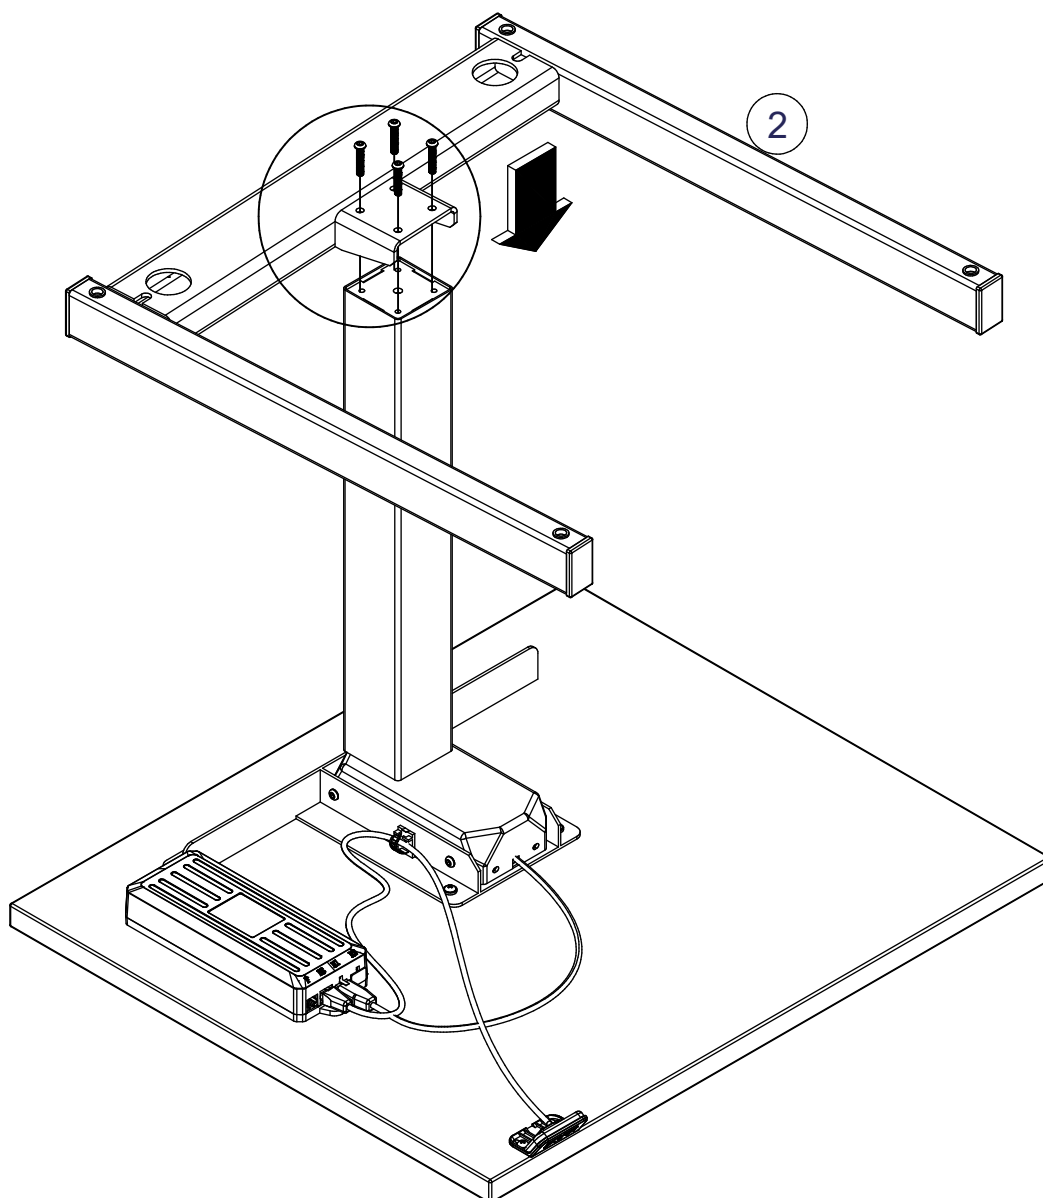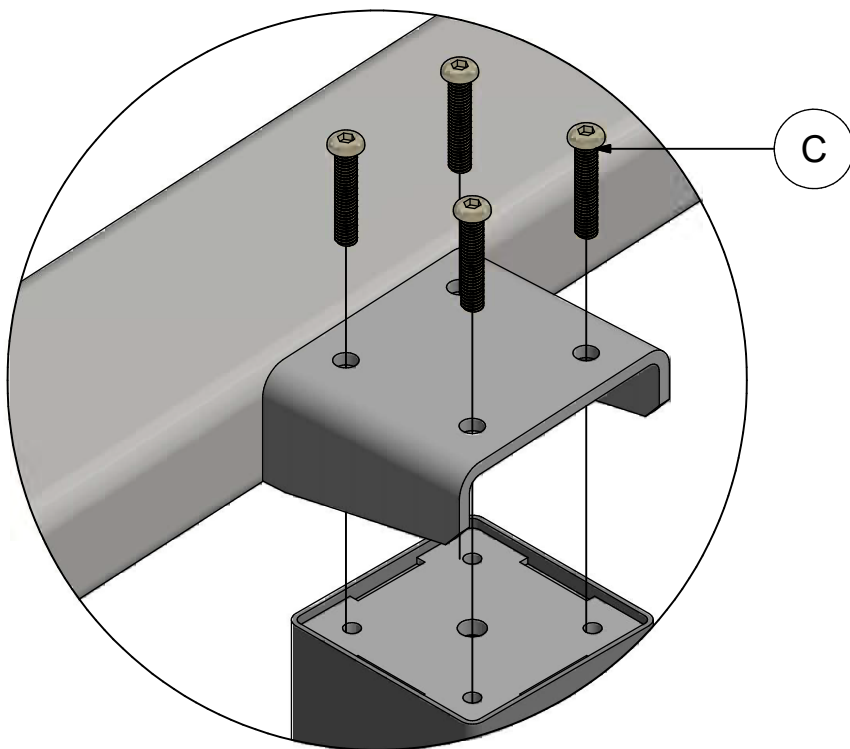  


GLIDES

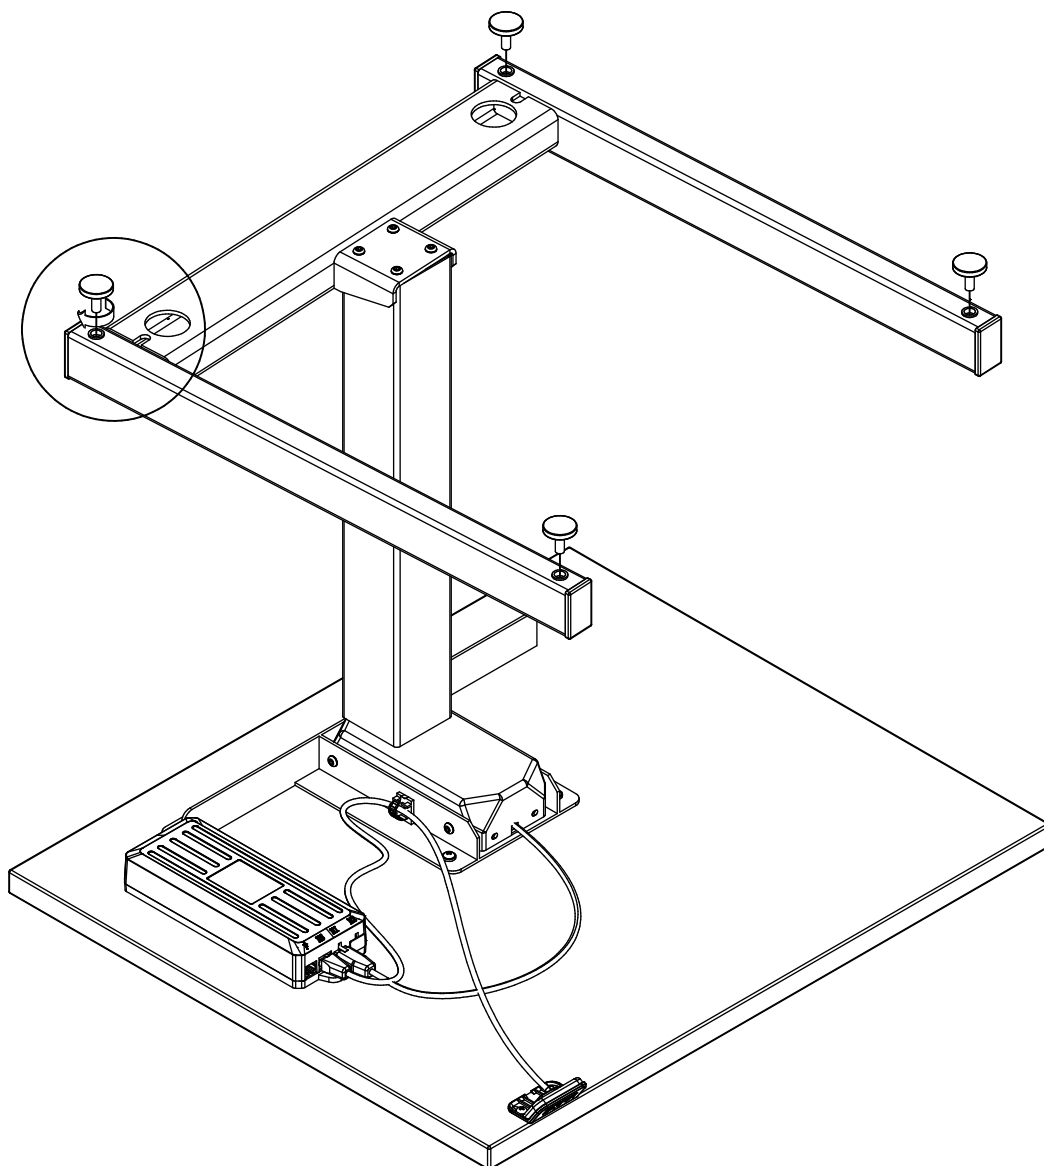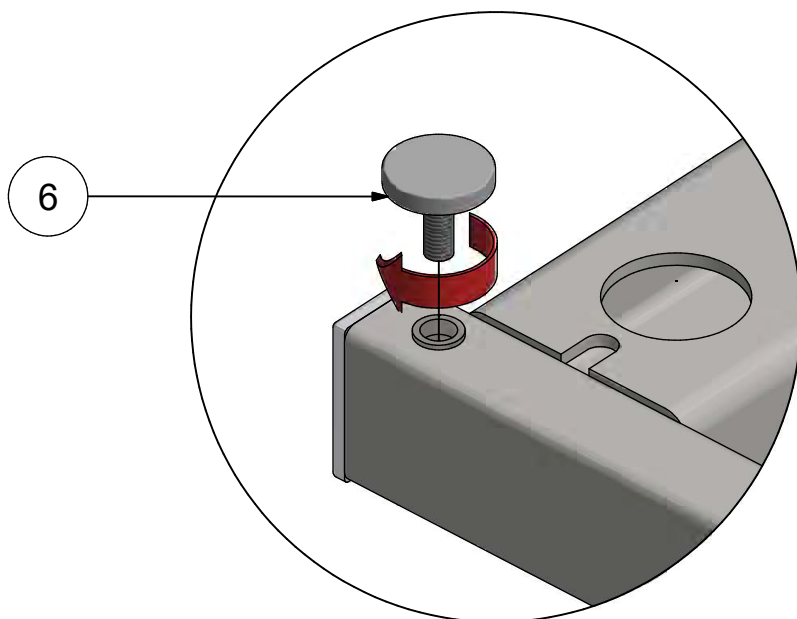  

FURNITURE CASTORS

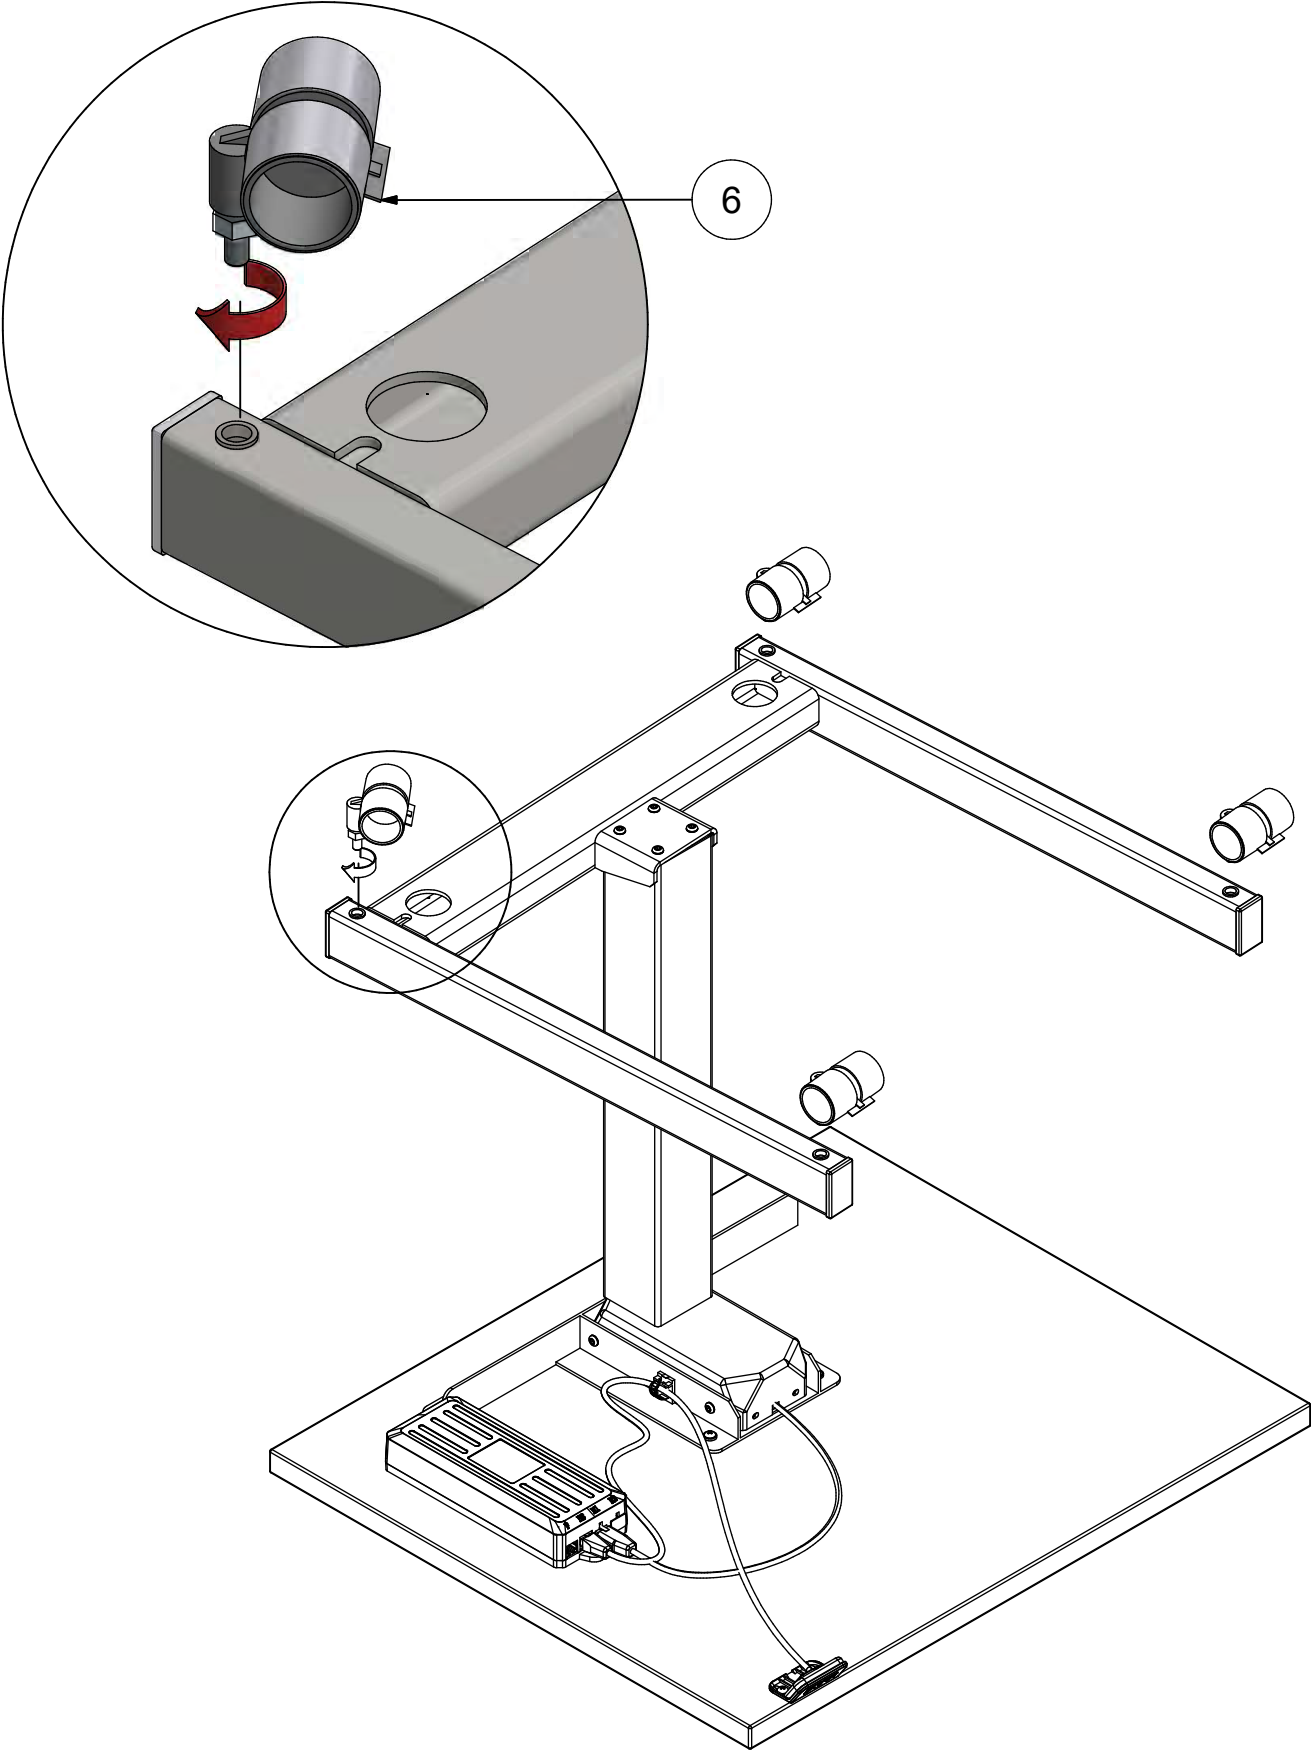 

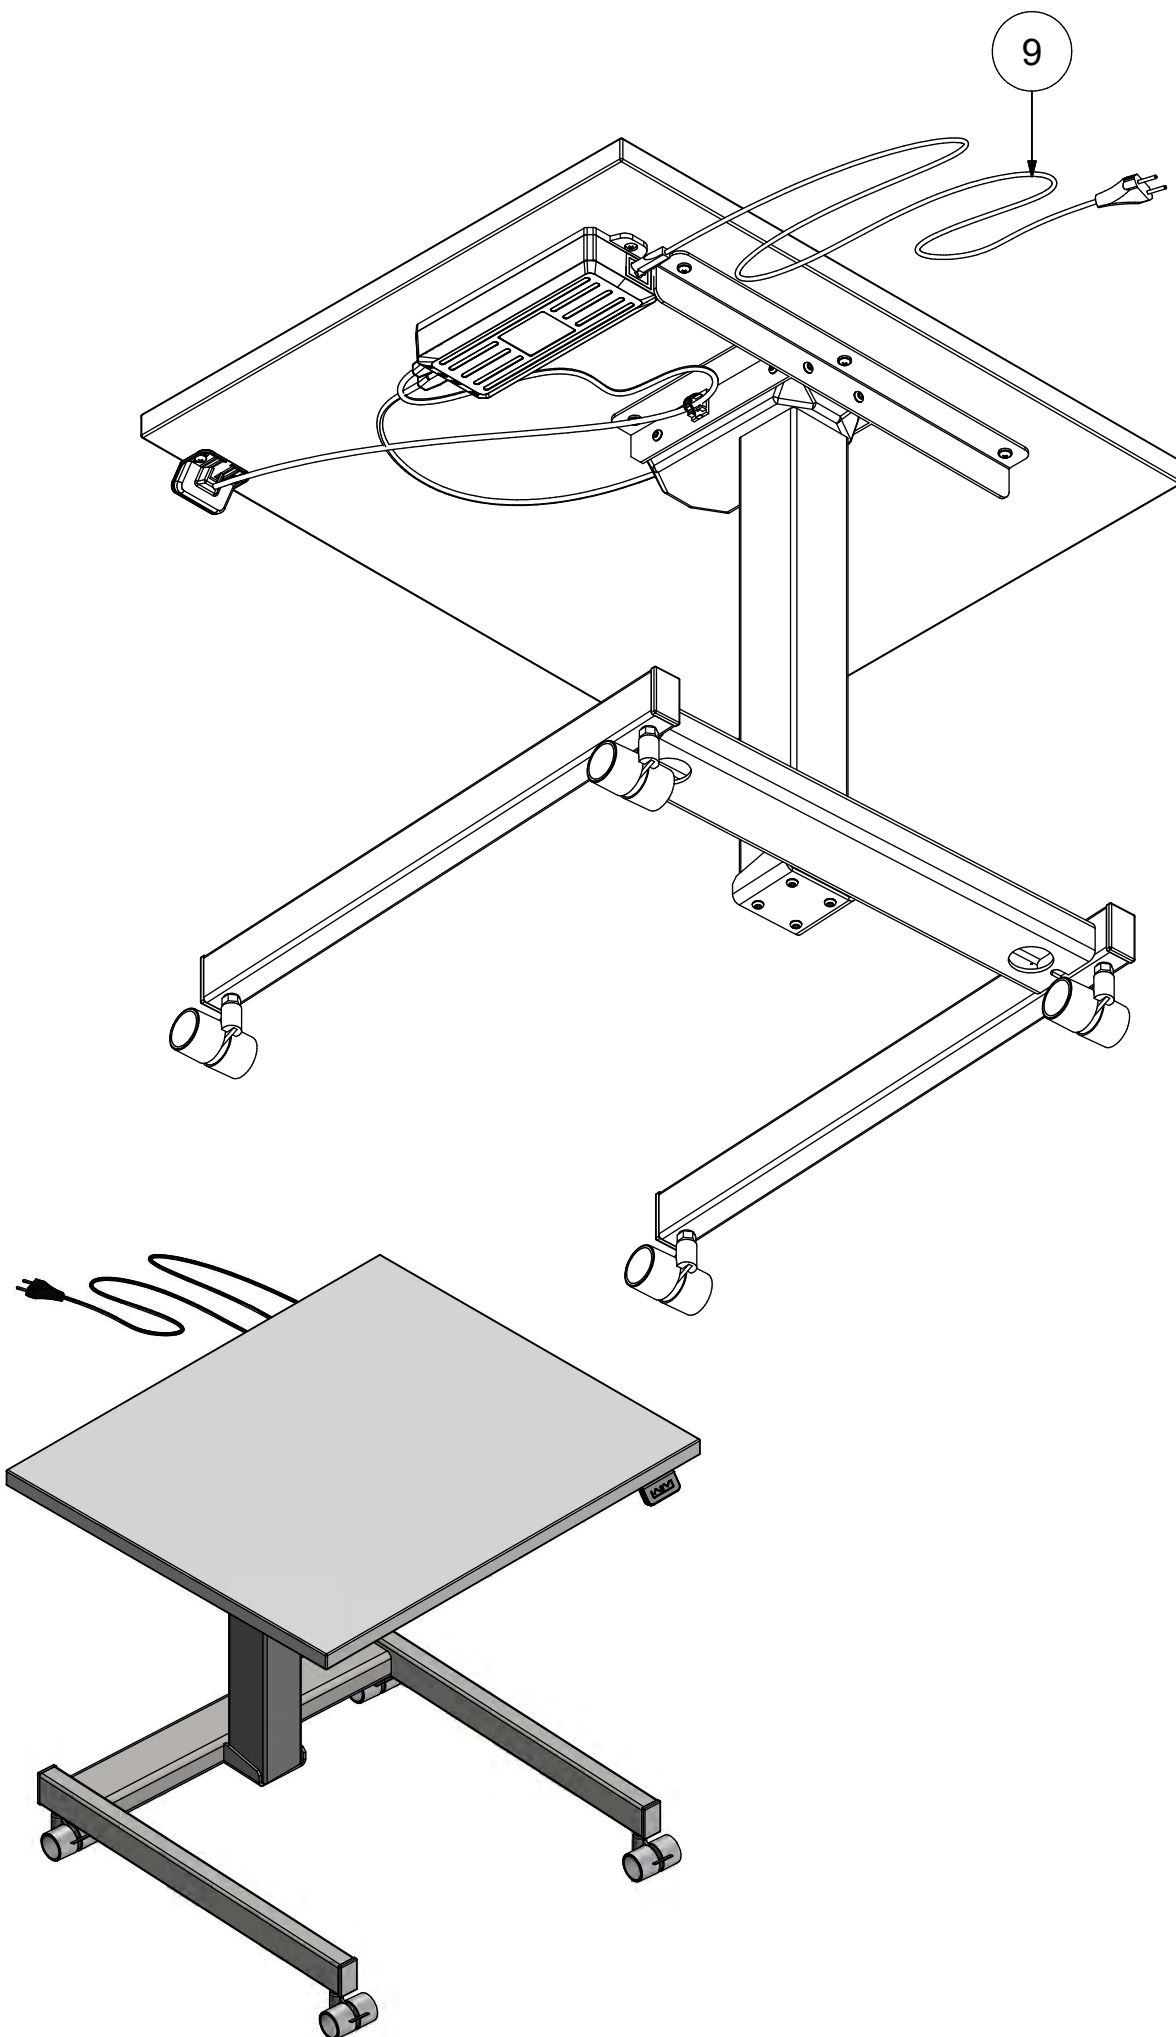 

Troubleshooting

- Check all connections that are in the bottom and correctly closed.
- The wires are secured under the cover and cannot swing to activate the anti-collision.
- Unplug the power cord and plug it back in.
- If the frame does not move downwards, perform a reset.
- Check that the control unit is attached to the upper frame by the rails so that it does not activate the anti-collision when swinging.
- resetting the table (you should be patient here). Press the button at the bottom until it starts moving, about 30 sec.).
- Push the down-button as long as table starts to move, and goes to the lowest possible height. This step may need to be repeated several times. Release your finger from the button and press down again, and the table should shake slightly. The table should now be at its lowest height. Now the resetting is completed successfully.

More help:

hello@allithatoasztal.hu